

MERIDIAN 519 USER MANUAL

Contents

Sales and service in the UK.....	1
Sales and service in the USA.....	2
Designed & manufactured in the UK by.....	1
Acknowledgements.....	2
Introduction.....	3
About the 519 Series.....	3
Unpacking the 519.....	3
Installing your 519.....	3
General precautions.....	3
Sitting.....	3
Connections.....	4
Starting off with 519.....	3
Checking.....	4
Switching on.....	5
If there is no light.....	5
Basic operation of 519.....	6

Jumper Options.....	6
Opening the Case.....	6
Locating the Jumper Positions.....	7
Jumper 1.....	7
Jumper 2.....	7
Jumpers 3-4.....	8
Help.....	7
Yellow power light not lit.....	7
Red lock light not lit.....	7
The remote control is not working.....	7
Distortion & not AD-2.....	7
Intermittent.....	7
Radio interference.....	8
Cleaning.....	8
Maintenance & Service.....	8
Specifications.....	8
Index.....	9

MERIDIAN 519 USER MANUAL

Sales and service in the UK

Meridian Audio Ltd
Sionhill
Huntingdon
Cambs. PE18 8ED
England

Tel (0) 1480 62144
Fax (0) 1480 439934

Boothroyd Stuart
MERIDIAN
Building 24/25, Suite 112
Atlanta, GA 30351

© 1992, 1993, 1995

Designed & manufactured in the UK by

Digital Gramophones & Wireless Ltd
Sionhill
Huntingdon
Cambs. PE18 8ED
England

Copyright © 1992, 1993, 1995 Digital Gramophones & Wireless Ltd

Acknowledgements

Trademarks etc:

Boothroyd Stuart Meridian and Meridian are registered trademarks of Meridian Audio Ltd.

AD-2 is a trademark of Dolby Laboratories Licensing Corporation.

Author: Richard Hollingshead.

Contents

Sales and service in the UK.....	2	Jumper Options.....	6
Sales and service in the USA	2	Opening the Case	6
Designed & manufactured in the		Locating the Jumper Positions	6
UK by	2	Jumper 1	6
Acknowledgements	2	Jumper 2	6
Introduction.....	3	Jumpers 3-5	6
About the 500 Series	3	Help!	7
Unpacking the 519	3	Yellow power light not lit.....	7
Installing your 519	3	Red lock light not lit	7
General precautions	3	No audio from AC-3 Decoder	7
Siting	3	No audio when playing a Laser	
Connections	4	Disc which is not AC-3	
Starting off with 519	5	encoded	7
Checking	5	Radio interference	8
Switching on	5	Cleaning	8
If there is no light	5	Maintenance & Service	8
Basic operation of 519	5	Specification	9
		Index	9

Sales and service in the UK

Meridian Audio Ltd
Stonehill
Huntingdon
Cambs. PE18 6ED
England

Tel (0) 1480 52144
Fax (0) 1480 459934

Sales and service in the USA

Meridian America Inc.
3800 Camp Creek Parkway
Building 2400, Suite 112
Atlanta, GA 30331

Tel. (404) 344-7111
Fax (404) 346-7111

Designed & manufactured in the UK by

Digital Gramophone & Wireless Ltd
Stonehill
Huntingdon
Cambs. PE18 6ED
England

Copyright © 1992,1993,1995 Digital Gramophone & Wireless Ltd

Acknowledgements

Trademarks etc.

Boothroyd|Stuart Meridian and *Meridian* are registered trademarks of Meridian Audio Ltd.

AC-3 is a trademark of Dolby Laboratories Licensing Corporation.

Author: Richard Hollinshead.

Introduction

The Meridian 519 Laser Demodulator is part of the 500 Series of advanced high-fidelity equipment.

In purchasing a Meridian 519 Laser Demodulator, you have acquired a refined piece of equipment that will continue to bring you listening pleasure for many years. This manual will enable you to get the most from it.

About the 500 Series

The Meridian 500 Series is a unique system of digital, analogue and video components designed to meet the demand for absolute quality, ease of use and lasting value.

The flexibility of the Meridian 500 Series is such that you can assemble a system as simple or as complex as you need, perfectly suited to your requirements, and with the ability to add to it or change it at a later date should those requirements change.

The Meridian 500 Series includes a sophisticated communications link, to ensure that any configuration of units will work together as a fully integrated system.

Unpacking the 519

On opening the carton, you should have found the following parts:

- Meridian 519 Laser Demodulator
- Power cord
- Meridian Comms lead
- This manual

If any of these items is missing, please contact your dealer. We suggest that you retain the packing carefully as it provides maximum protection for the unit in transit.

Installing your 519

General precautions

Before carrying out any installation, you should ensure that the 519 is marked with the correct voltage for your local AC supply. Should this not be the case, do not proceed – but contact your dealer.

As a general rule, you should not make any connections to the 519, or to any other component in your system, whilst the AC power supply is connected and switched on.

Siting

We recommend the following guidelines for location.

- The 519 should not be placed on top of a power amplifier.
- Avoid sites where it would be subjected to direct sunlight or where it is near a heat source, e.g. a central heating radiator
- Avoid sites where the 519 could be subjected to strong magnetic radiation, like near a power amplifier.
- Not too close to a television, or where connecting cables may be subject to, or cause, interference.


Connections

There are five types of connection that may be made to the 519:

- power
- Laser Disc RF
- electrical digital audio
- optical digital audio
- communications.

Digital audio and RF connections need to be made to other components in your system. Communication connections have to be made to most of the other *Meridian* components in your system in order for them to act as one system. The connections to your 519 are very important and care should be taken in deciding which connections to make.

A typical installation would be:

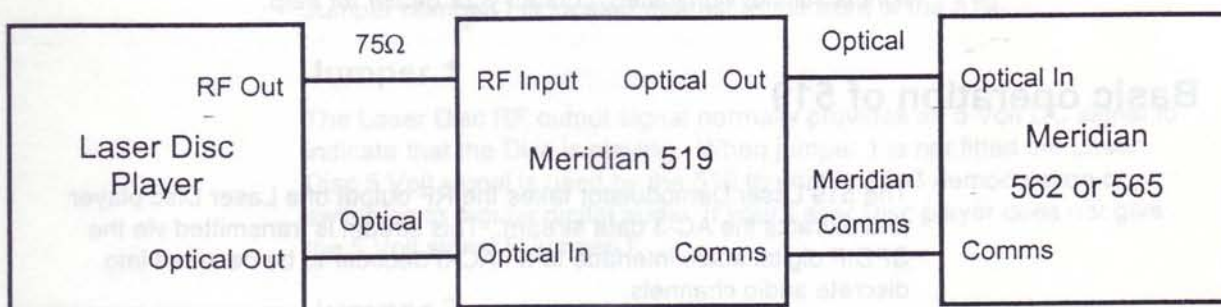

Note Electrical digital audio connections may be used in place of the optical connections.

Tip In common with all digital products, the 519 emits some radio-frequency signals. For this reason, try to keep all power cables and Comms leads away from audio, antenna and loudspeaker cables. Some time spent laying out the cables carefully will repay you with the best possible performance later.

Starting off with 519

Checking

Before turning on the power, check once again that you have made all the connections correctly.

The 519 is designed to be left connected to AC power at all times and can be run continuously.

Switching on

The power switch is located directly next to the power inlet on the rear of the 519. Turn on the power switch at the rear of the unit. The yellow light on the front of the 519 will now be illuminated.

If there is no light

Check the power connections, including any fuses in the supply. If the light is still not illuminated, contact your dealer for help.

Basic operation of 519

The 519 Laser Demodulator takes the RF output of a Laser Disc player and extracts the AC-3 data stream. This stream is transmitted via the SPDIF digital audio interface to an AC-3 decoder to be decoded into discrete audio channels.

The 519 will also take the digital audio output of the Laser Disc player, and switch to it when the Laser Disc is not AC-3 encoded. AC-3 decoding is indicated by the red lock light.

The 519 has connections for the Meridian 500 Series Comms system. These connections are used only to communicate with other Meridian equipment. The 519 itself uses these connections only to suppress clicks as it switches between AC-3 decoding and regular digital audio.

Note The Meridian 519 can be used with or without other *Meridian* equipment. However an AC-3 decoder must be used to obtain an audio output.

Siting

We recommend the following guidelines for siting:

- The 519 should be located in a cool, dry place.
- Avoid placing the 519 in direct sunlight or near a heat source.
- Avoid placing the 519 near a large magnet or other magnetic field.
- Avoid placing the 519 near a large electrical appliance or other source of electromagnetic interference.
- Avoid placing the 519 near a large metal object or other conductive material.

Jumper Options

The 519 may be fitted with up to five internal jumpers which will change the way it operates. IN ALMOST ALL INSTALLATIONS NONE OF THESE JUMPERS WILL BE NEEDED. The unit is supplied with no jumpers fitted. It is recommended that the jumpers are fitted only by your dealer.

Opening the Case

WARNING: BEFORE OPENING THE CASE DISCONNECT THE 519 FROM THE AC SUPPLY. BEFORE RECONNECTING THE SUPPLY ENSURE THAT THE CASE IS FULLY REASSEMBLED.

To open the case remove the four screws at the corners of the rear of the 519 and the four screws at the corners of the base of the 519.

Locating the Jumper Positions

There are five sets of two pins each which may be fitted with jumpers. Jumper number 1 is located nearest to the front of the 519.

Jumper 1

The Laser Disc RF output signal normally provides an 5 Volt DC signal to indicate that the Disc is playing. When jumper 1 is not fitted the Laser Disc 5 Volt signal is used by the 519 to enable AC-3 demodulation or switching to regular digital audio. If your Laser Disc player does not give the 5 Volt signal fit jumper 1.

Jumper 2


In normal use the 519 will switch to regular digital audio if it is unable to demodulate AC-3. This allows both AC-3 encoded and non AC-3 encoded discs to be replayed with no change of settings by the user. However, fitting jumper 2 tells the 519 not to switch to regular digital audio. In this case, if AC-3 cannot be decoded, the 519 will produce a silent digital audio output at 48kHz sampling rate.

Jumpers 3-5

These jumpers allow the system address for the Meridian 500 Series Comms to be changed:

System Address	Jumper 3	Jumper 4	Jumper 5
1	×	×	×
2	✓	×	×
3	×	✓	×
4	✓	✓	×
5	×	×	✓
6	✓	×	✓
7	×	✓	✓
8	✓	✓	✓

LH SIDE
TOP

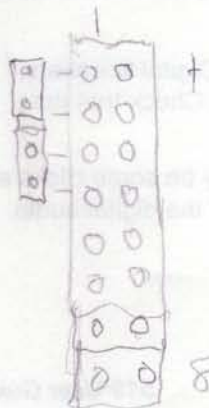

FRONT

Help!

Yellow power light not lit

Check the following:

1. There is AC power connected to the socket on the rear of the 519.
2. The power switch on the rear panel of the 519 is turned on.

If the yellow light will still not illuminate, check any fuses in your power supply and the fuse in the inlet of the 519. If these are all intact, contact your dealer.

Red lock light not lit

Check the following:

1. The Laser Disc RF output is connected to the RF input of the demodulator
2. The Laser Disc is playing.
3. The Laser Disc is AC-3 encoded.

If the Laser Disc player in use does not produce a 5V DC signal, this will prevent the 519 from decoding AC-3. To overcome this fit jumper 1.

No audio from AC-3 Decoder

Check the following:

1. The yellow and red lights are lit on the 519 (see above).
2. The audio system is able to replay non AC-3 sources (e.g. CD).
3. The 519 digital audio output (either cable or optical) is connected to the AC-3 decoder.
4. The correct physical input of the AC-3 decoder is selected.

No audio when playing a Laser Disc which is not AC-3 encoded

Check the following:

1. The yellow light is lit on the 519.
2. The audio system is able to replay non AC-3 sources (e.g. CD).
3. The 519 digital audio input (either cable or optical) is connected to the Laser Disc player.
4. The 519 digital audio output (either cable or optical) is connected to the AC-3 decoder.
5. The correct physical input of the AC-3 decoder is selected.
6. Jumper 2 is not fitted.

If the Laser Disc player in use does not produce a 5V DC signal, this will prevent the 519 from selecting its digital audio inputs. To overcome this fit a jumper in position 1.

Audible clicks or thumps when pressing play, stop or pause on the Laser Disc

If you are using a Meridian AC-3 decoder or Meridian Digital speakers, the 500 Comms system will help to reduce any clicks. Check that the Comms lead is in place.

If you are not using a Meridian 565 decoder, there may be some clicks as the 519 switches to and from its digital audio inputs. If the digital audio inputs are not in use, fit Jumper 2 to reduce the clicks.

Radio interference

NOTE 519 is a digital audio and computing device which has been designed to very high standards of electromagnetic compatibility.

FCC WARNING: This equipment generates and can radiate radio frequency energy and if not installed and used correctly in accordance with our instructions may cause interference to radio communications or radio and television reception. It has been type-tested and complies with the limits set out in Subpart J, Part 15 of FCC rules for a Class B computing device. These limits are intended to provide reasonable protection against such interference in home installations.

If this equipment does cause or suffer from interference to/from radio or television reception then the following measures should be tried:

1. Reorient the receiving aerial (or antenna) or route the antenna cable of the receiver as far as possible from the 519 and its cabling.
2. Ensure that the receiver uses well-screened antenna cable.
3. Relocate the receiver with respect to the 519.
4. Connect the receiver and this product to different AC outlets.
5. If the problem persists contact your dealer.

EEC This product has been designed to comply with the limits set out in EN55013 and EN55020C.

REMEMBER to switch all units off before changing any connections.

Cleaning

Disconnect the power cord before cleaning the unit.

Note Do not use abrasive cleaners on any part of the 519.

Maintenance & Service

The *Meridian* 500 Series of hi-fi components have been carefully designed to give years of untroubled service, and there are no user-serviceable parts inside the case, nor do the units require any form of maintenance.

In the unlikely event that your 519 fails to function correctly, it should be returned, in its original packing, to your *Meridian* dealer. In case of difficulty within the UK or USA please contact our sales and service offices shown on page 2.

Outside the UK: contact the importing agent for the territory. A list of *Meridian* agents abroad is available from the above address.

No responsibility can be accepted for the 519 whilst in transit to the factory or an agent and customers are, therefore, advised to insure the unit.

Specification

Inputs	1 Laser Disc RF 75 Ω 0.5V p-p nominal 1 cable digital serial interface to SPDIF 1 optical digital serial interface to SPDIF
Outputs	1 cable digital serial interface to SPDIF 1 optical digital serial interface to SPDIF
Indicators	Yellow LED for Power Red lock LED for AC-3 decoding
User Options	Jumper Options to: 1. Disable 5V DC detection on RF input 2. Disable switching to digital audio inputs 3. Set Meridian Comms System Address
Dimensions (WxDxH)	246 x 170 x 58mm, (9.7 x 6.7 x 2.3")
Unpacked Weight	1.5 kg (3.3 lb.)
Packed Weight	2 kg (4.4 lb.)
Power Consumption	6 VA Maximum

Index

500-Series, 3

AC3, 5

Acknowledgements, 2

Cleaning, 8

Connections, 4

Contents, 2

Help!, 7

Installation, 3

Introduction, 3

Jumpers, 6

Opening the case, 6

Power switch, 5

Radio interference, 8

Repacking 519, see Unpacking

Service

where to get, 8

Specifications, 9

Switching on, 5

Unpacking 519, 3

