 
 


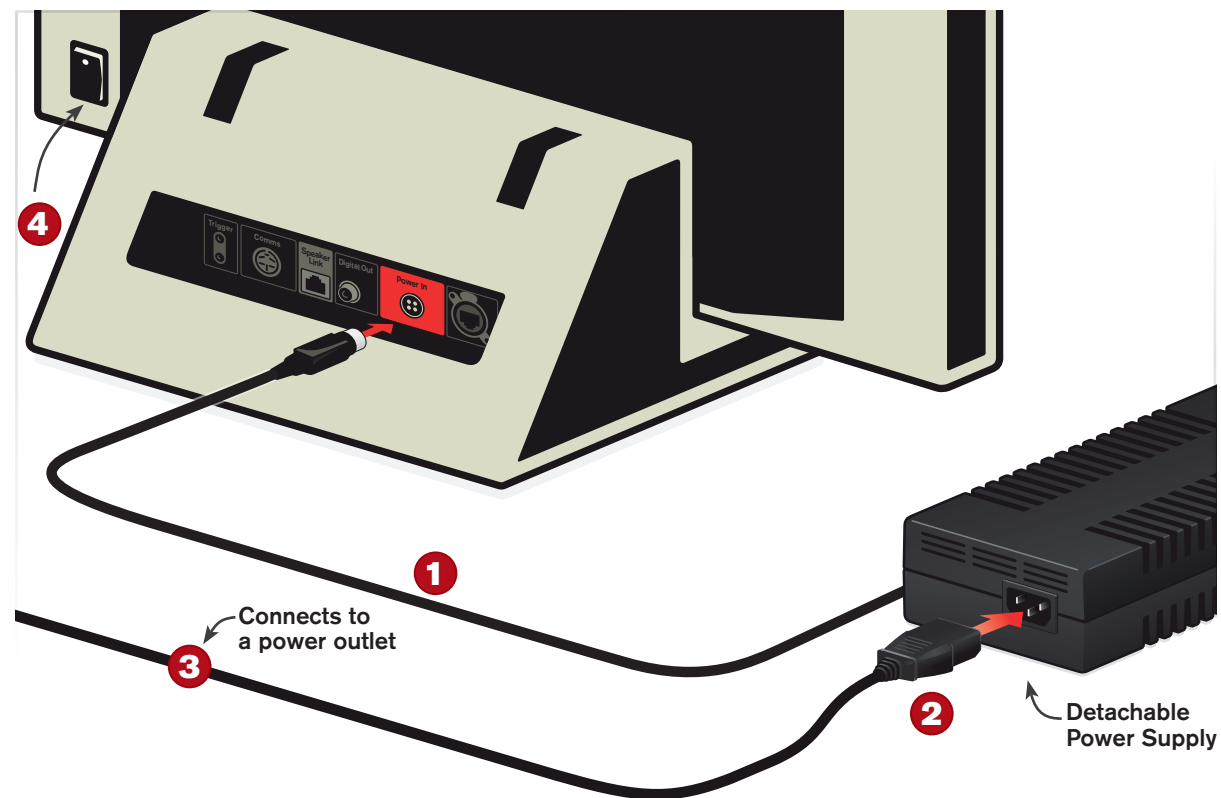

STEP 3: POWER CONNECTIONS


- 1 Connect the power supply (included) to the rear of the Control 15
 - 2 Connect an IEC power cable to the supply.
 - 3 Plug the power cable into a surge-protected power strip.
 - 4 Power-on the Control 15 by rocking its rear-panel power switch.
- ! The power supply is auto-sensing, and accepts any AC mains voltage.

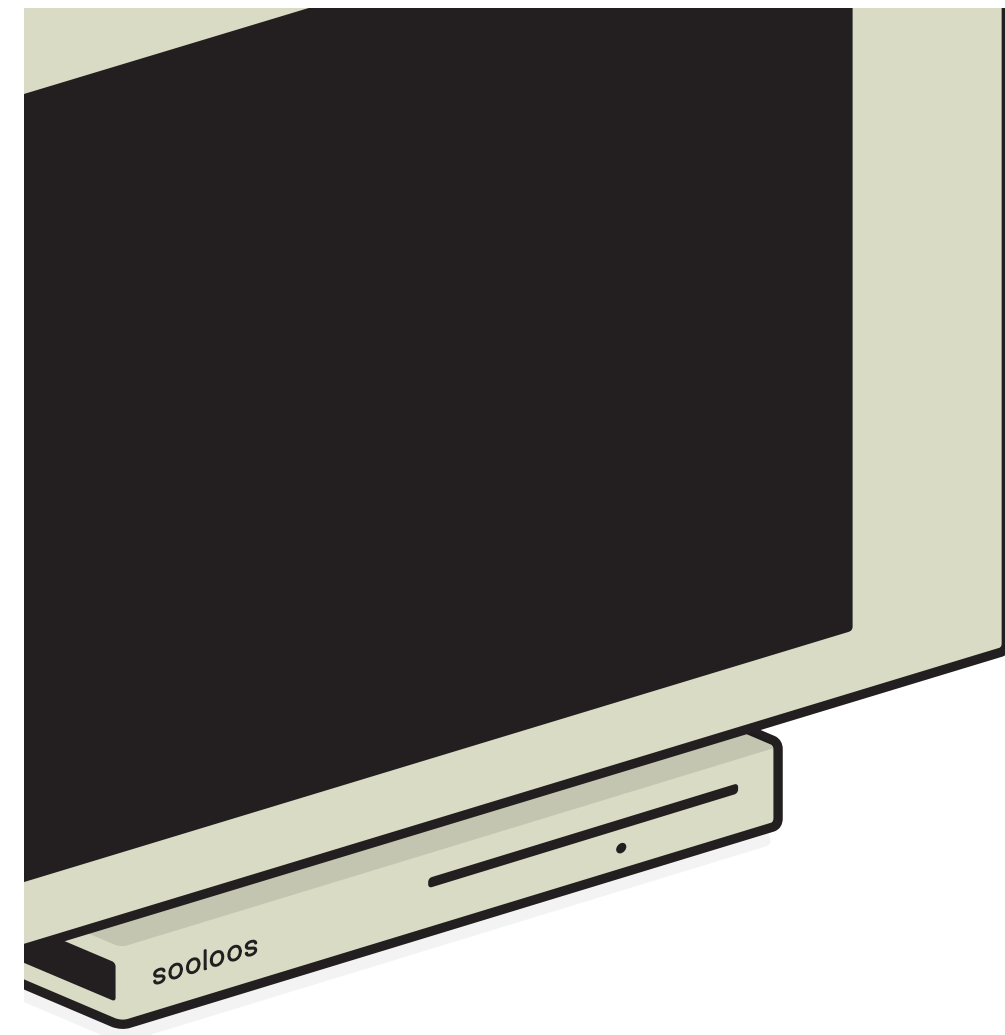

Quick Start Guide

FOR USE WITH CONTROL 15
STANDALONE SYSTEM

 Control 15

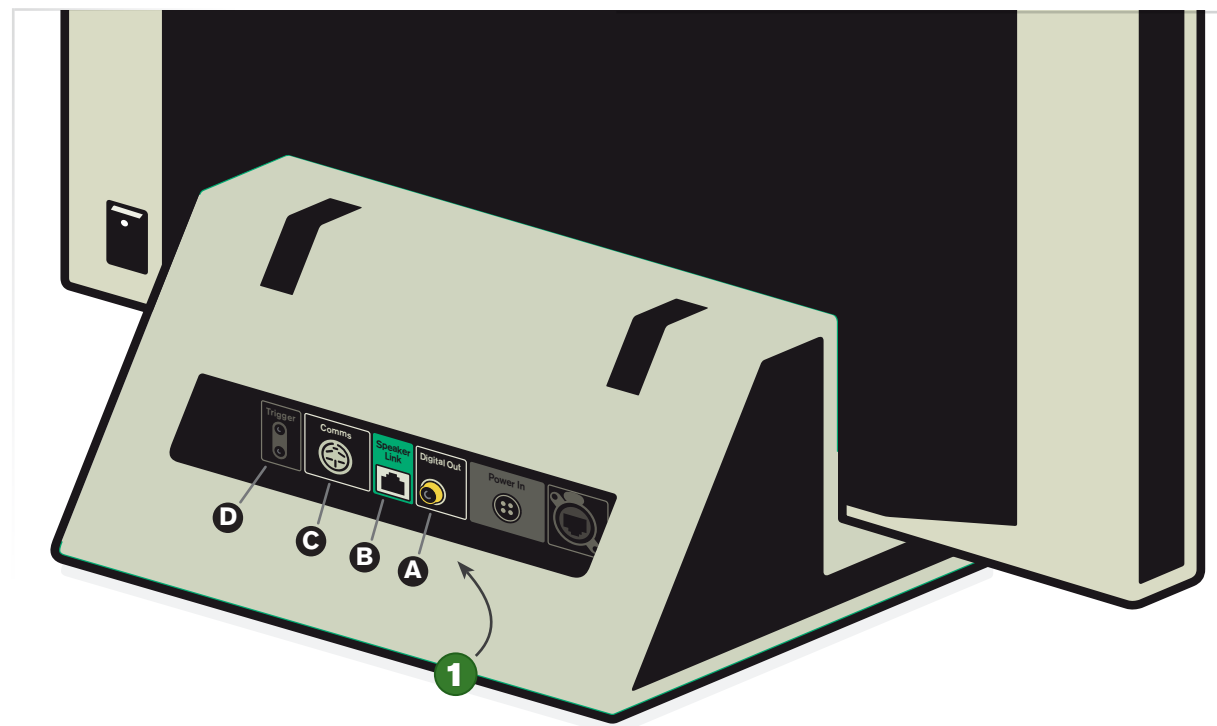


Note: This document covers the use of the Control 15 in a standalone configuration. For setup in other systems, see the appropriate QuickStart Guides supplied with other units.

STEP 1: AUDIO CONNECTIONS

- 1 Your Control 15 features a S/PDIF digital audio output. This can be connected to an S/PDIF input on your audio system, or on Meridian DSP Loudspeakers. The Control 15 also includes a SpeakerLink output, which can be connected to Meridian DSP Loudspeakers.

- A. S/PDIF digital audio output
- B. Meridian SpeakerLink audio output
- C. Meridian Comms (for integrating your Control 15 with a Meridian system)
- D. Meridian trigger out and IR in (included for future use)

 - ! As a precaution, please lower the volume and/or power down any external audio components before making new audio connections.

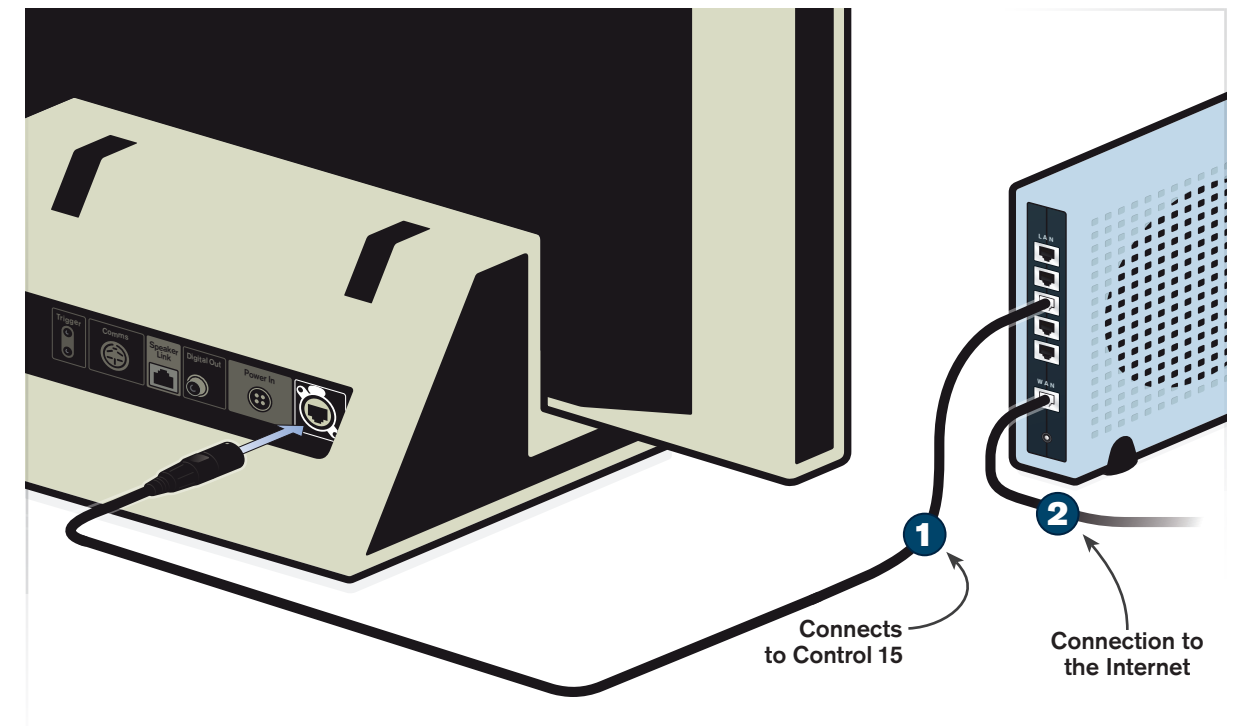

STEP 2: NETWORK CONNECTIONS

- 1 Attach the Control 15's network port to a LAN port on your router. You can use the Neutrik Ethercon connector (supplied) with an Ethernet cable of the appropriate length (not supplied.)
- 2 Make sure the WAN/Internet port of this router connects to the rest of your network, or to your Cable/DSL modem.
- ! Depending on the make and model of your router, crossover Ethernet cable(s) may be required to make valid connections to your Control 15.