


MERIDIAN ROUGH-IN KIT FITTING INSTRUCTIONS

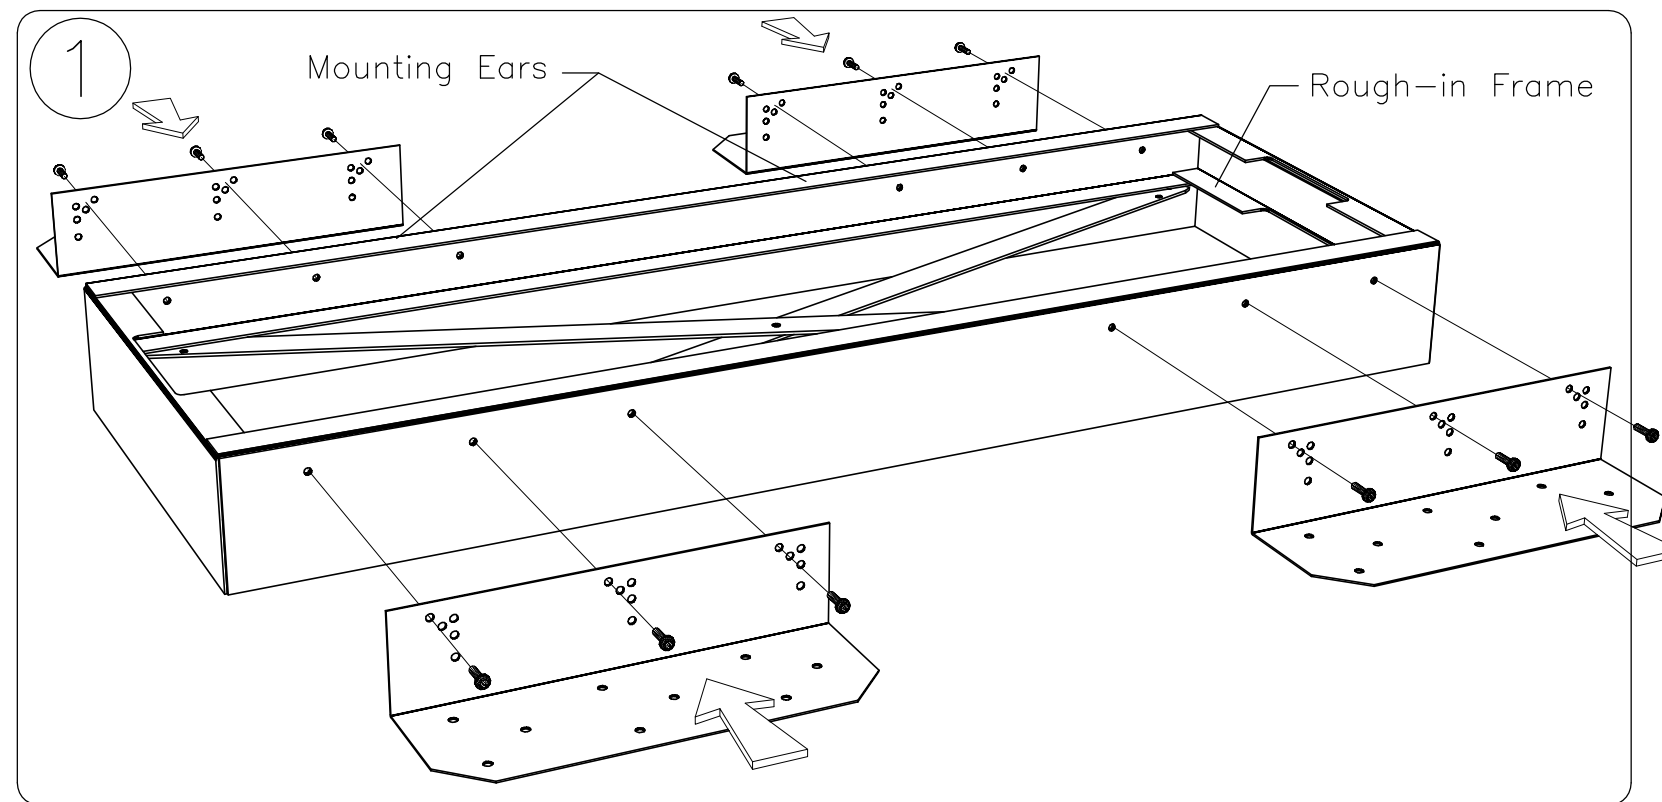

Procedure




The Rough-in Frame in kit form. See Meridian Rough-in Frame Assembly Instructions.

1)a) Place the Rough-in Frame face down on a flat surface.
b) Fit the 4 mounting ears into position using the supplied M4x10 Pozi Pan Head Screws.
c) The mounting ears have 5 labelled fixing positions $\frac{1}{2}$ "; $\frac{5}{8}$ "; $\frac{3}{4}$ "; 1" & $1\frac{1}{2}$ " from front edge of the Rough-in Frame, depending on thickness of sheetrock (Sometimes called Drywall; Gypsum or Wallboard). The front edge of Rough-in Frame should end up flush to sub-flush to the finished surface of the Wall.

2) Position the Rough-in Frame into the Stud Wall. A horizontal noggin fixed directly below the bottom of the Rough-in Frame would give additional support and facilitate the installation.

3) Push the Rough-in Frame Mounting Ears firmly against the Stud Work. Pull the Speaker cable through. Nail the mounting ears to the Stud Work with suitable 3" nails. (Not supplied)


4) Cut and fix Sheetrock tightly around the Rough-in Frame.

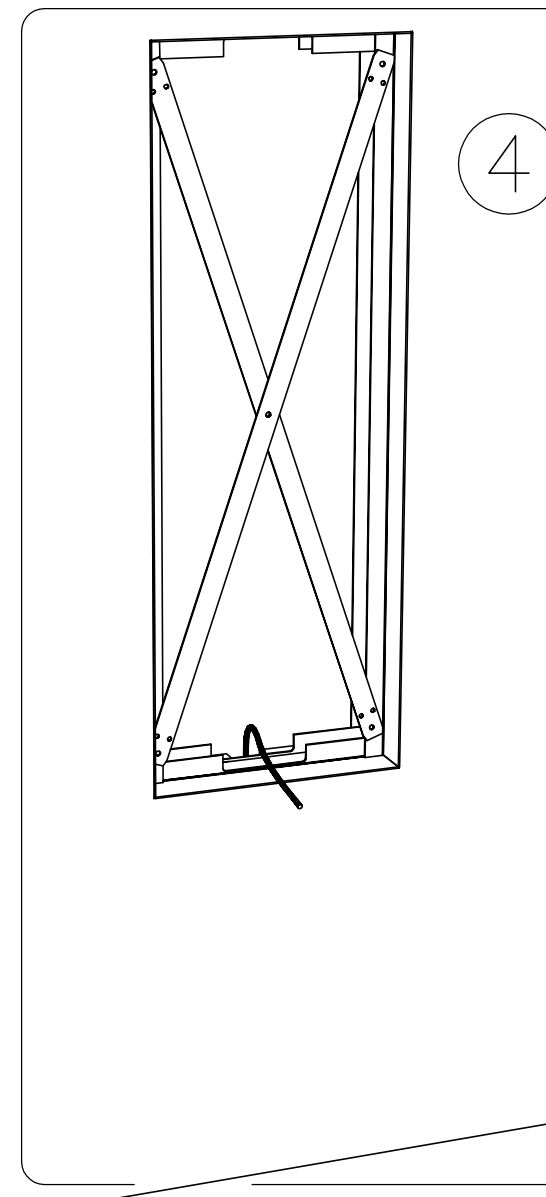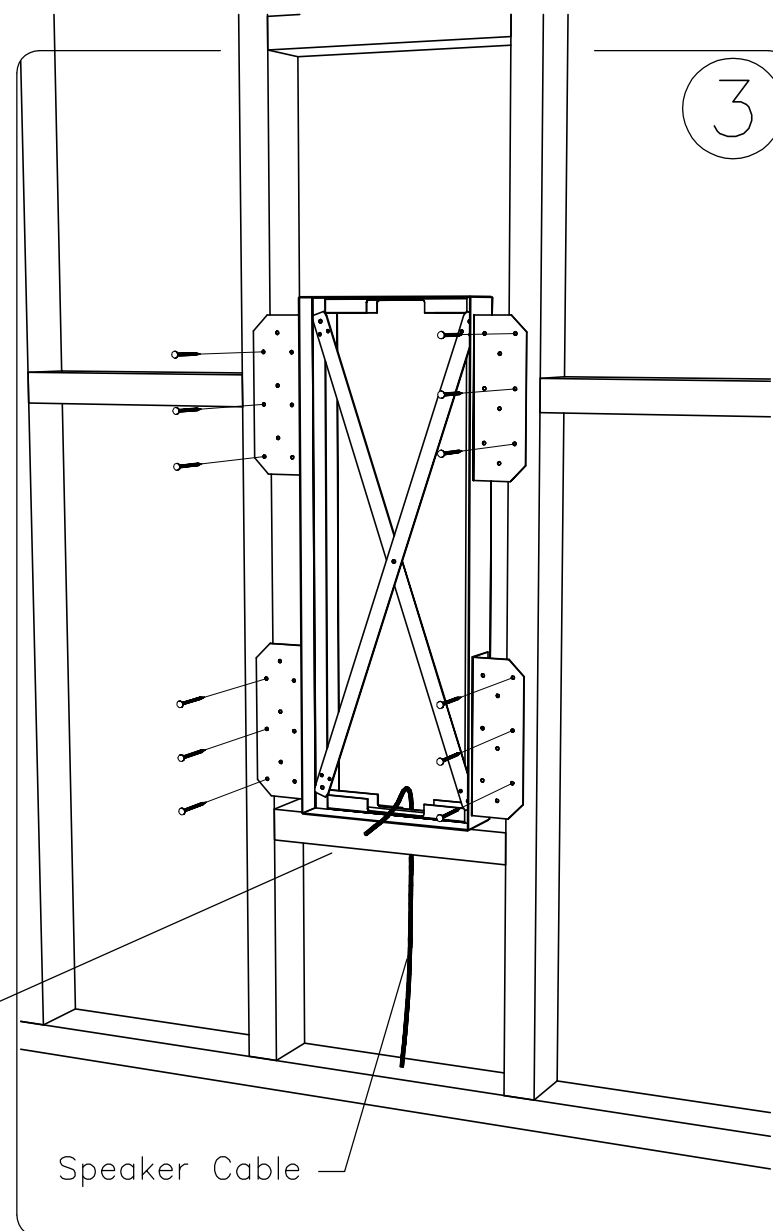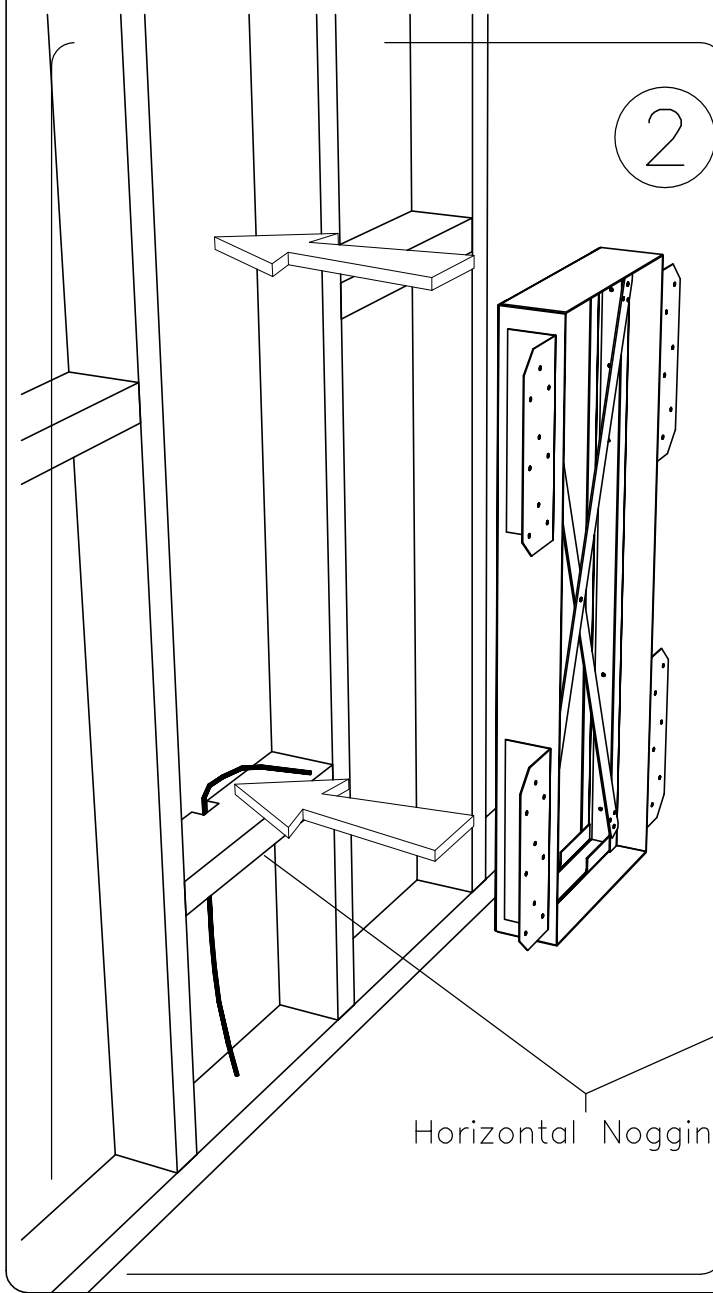

Meridian Wall Loudspeaker System
Designed and made in England by
Meridian Audio Limited.
Registered Design and Copyright
2006 ©


BOOTHROYD STUART
MERIDIAN

MERIDIAN ROUGH-IN KIT ASSEMBLY INSTRUCTIONS

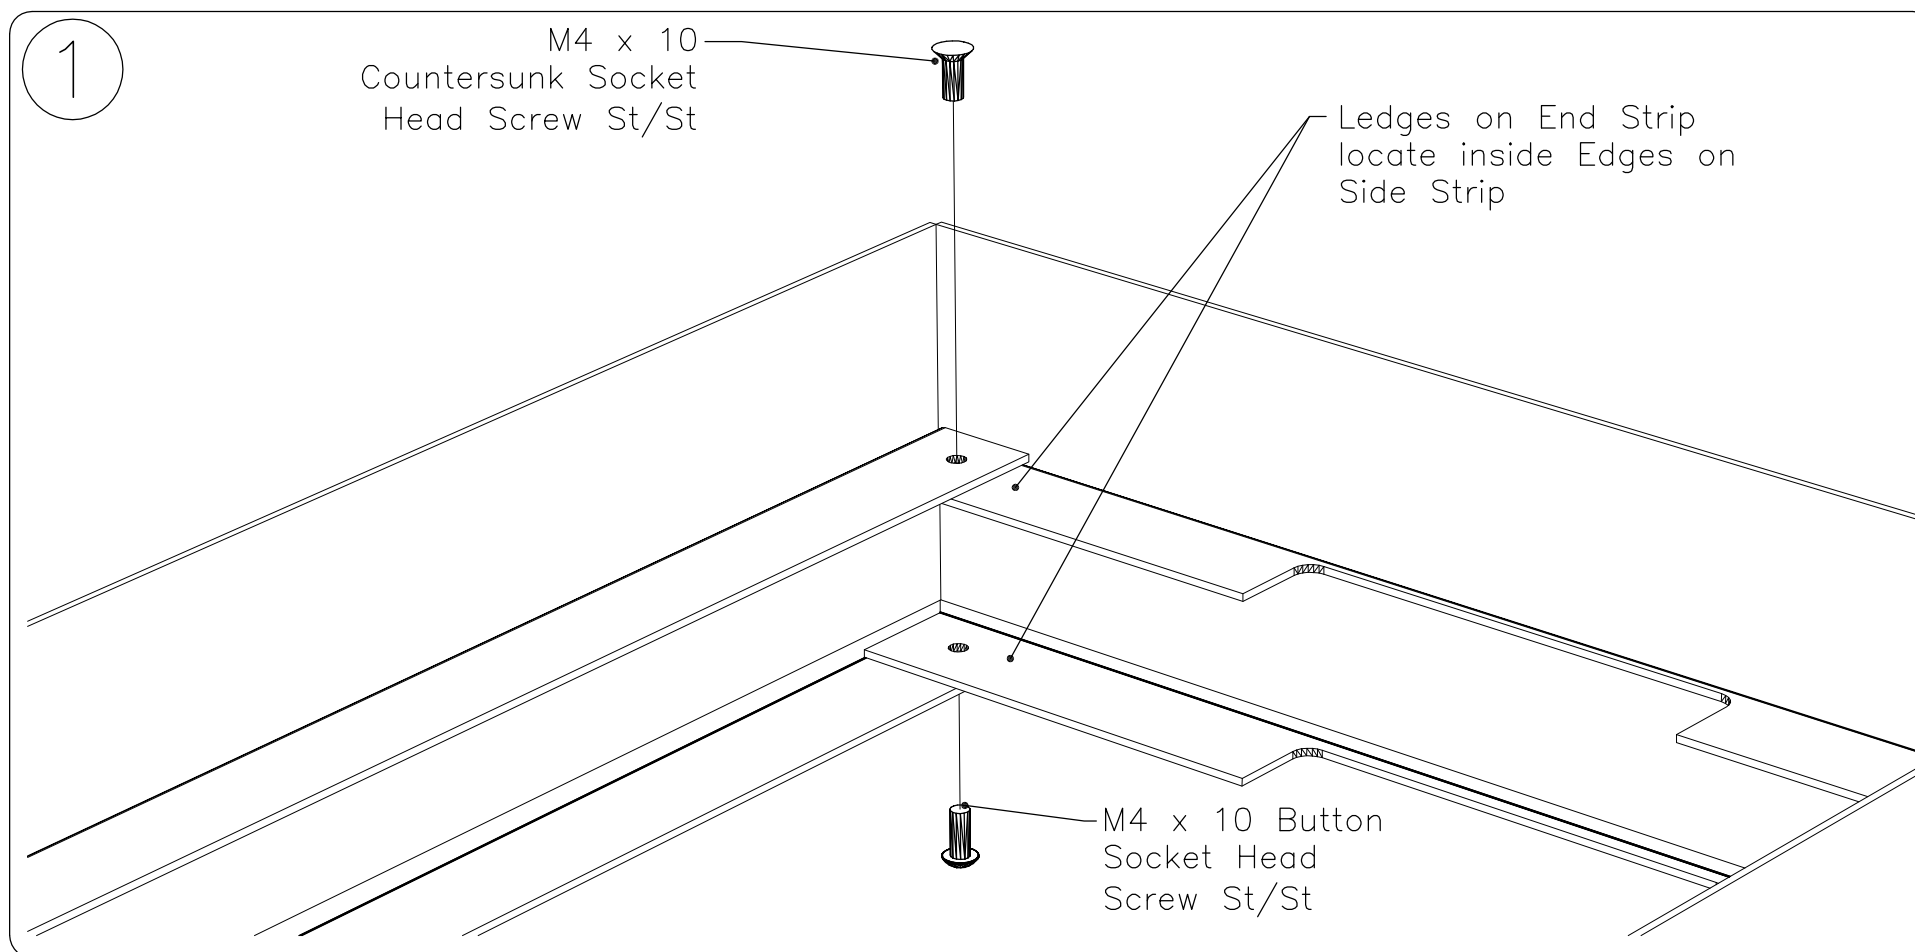

Notes

- 1) Fit all eight M4 Screws, do not tighten yet.
- 2) Screw in place using supplied M5 x 10 Socket Head Screws the 2 Bracing Strips. When in place clamp where they cross with a M5 x 10 Socket Head Screw and M5 Nut
- 3) Tighten all M4 Corner Screws

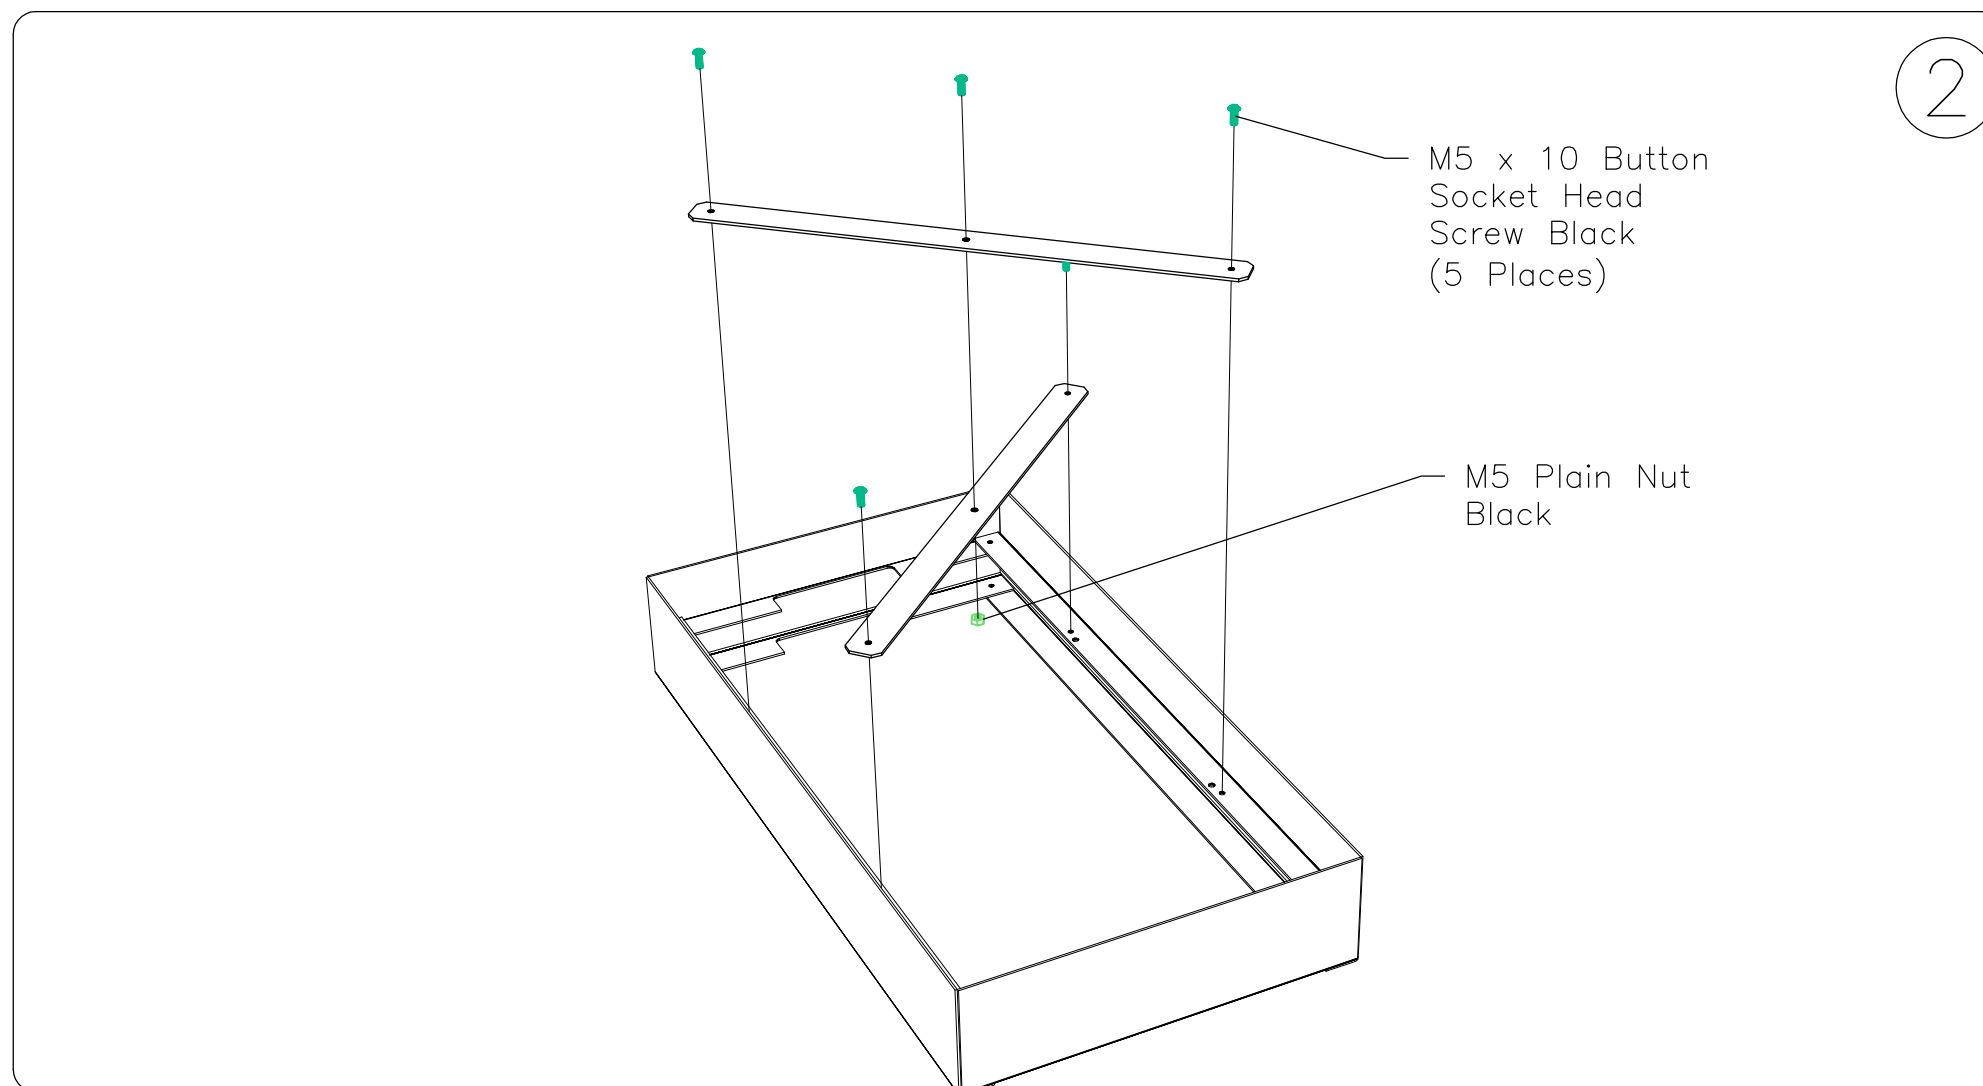

Meridian Wall Loudspeaker System
Designed and made in England by
Meridian Audio Limited.
Registered Design and Copyright
2006 ©

BOOTHROYD STUART
MERIDIAN